

©2006 Alacarte Clasps. All Rights Reserved.



15 OPTIONAL: Create a pick-up stick for positioning and gluing crystals with a toothpick and a tiny bit of museum putty rolled on tip.



19 Remove tongue. Spread thin, even layer of glue in recessed area avoiding hole at bottom. Do not flood with glue as it will seep into hole and cause a blockage.



16 Pour equal amounts of 2part epoxy and mix together. HELPFUL TIP: Mix with toothpick on sticky notepad for easy clean-up.




20 Use toothpick with putty to pick-up #9 teardrop crystal. (Or you can use tweezers, etc.).



17 Before adding glue, check to make sure crimp will fit inside endcap. Fill endcap 1/2 full with epoxy. Lightly dip tip of necklace ends into glue.



21 Lower into position. With finger gently push crystal down to be sure it is 'seated', Make sure crystal is even. If needed: use Isopropyl alcohol to remove any glue residue before it dries.

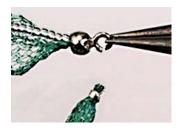

18 Slide/push endcap over crimp and have loop opening face down. (Seedbeads on top loop opening on bottom.)



22 Open ring slightly to attach clasp and squeeze to close. Enjoy!



WaterLily 18" Necklace Kit

## oTM Glue-it-Yourself Designer Clasps & Components Hlacar

www.alacarteclasps.com · www.wirelace.com email: info@alacarteclasps.com · tel 707.887.2825 ©2006 Alacarte Clasps. All rights reserved.



Distributor for WireLace"

11 2mm (tiny) crimps 4